

5930 S 118th Circle, Suite 1  
Omaha, Nebraska 68137

t (402) 895-4646  
f (402) 896-5658

[intouchcommunications.com](http://intouchcommunications.com)



## CANCELING MESSAGE INDICATOR LIGHT

To cancel a message indication that you left at another station, dial **42** plus the extension number of the station at which you left a message.

To cancel all message indications left at your keyset, dial **42** plus your extension. Your **MESSAGE** light will go out.